

### Step one

Place the clear visor panel over this template

### Step two

Remove the adhesive backing from the foam and apply within the grey box

### Step three



Align the elastic within the dashed lines and staple

### Step four

Turn the visor around and apply the blue sticker to cover the staples

### Step five

Clean the visor with wipes and then ready to use

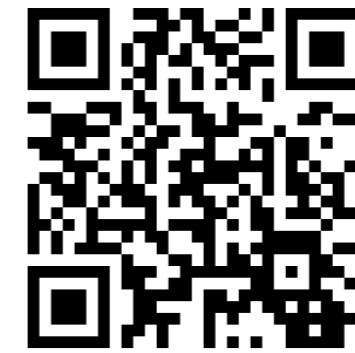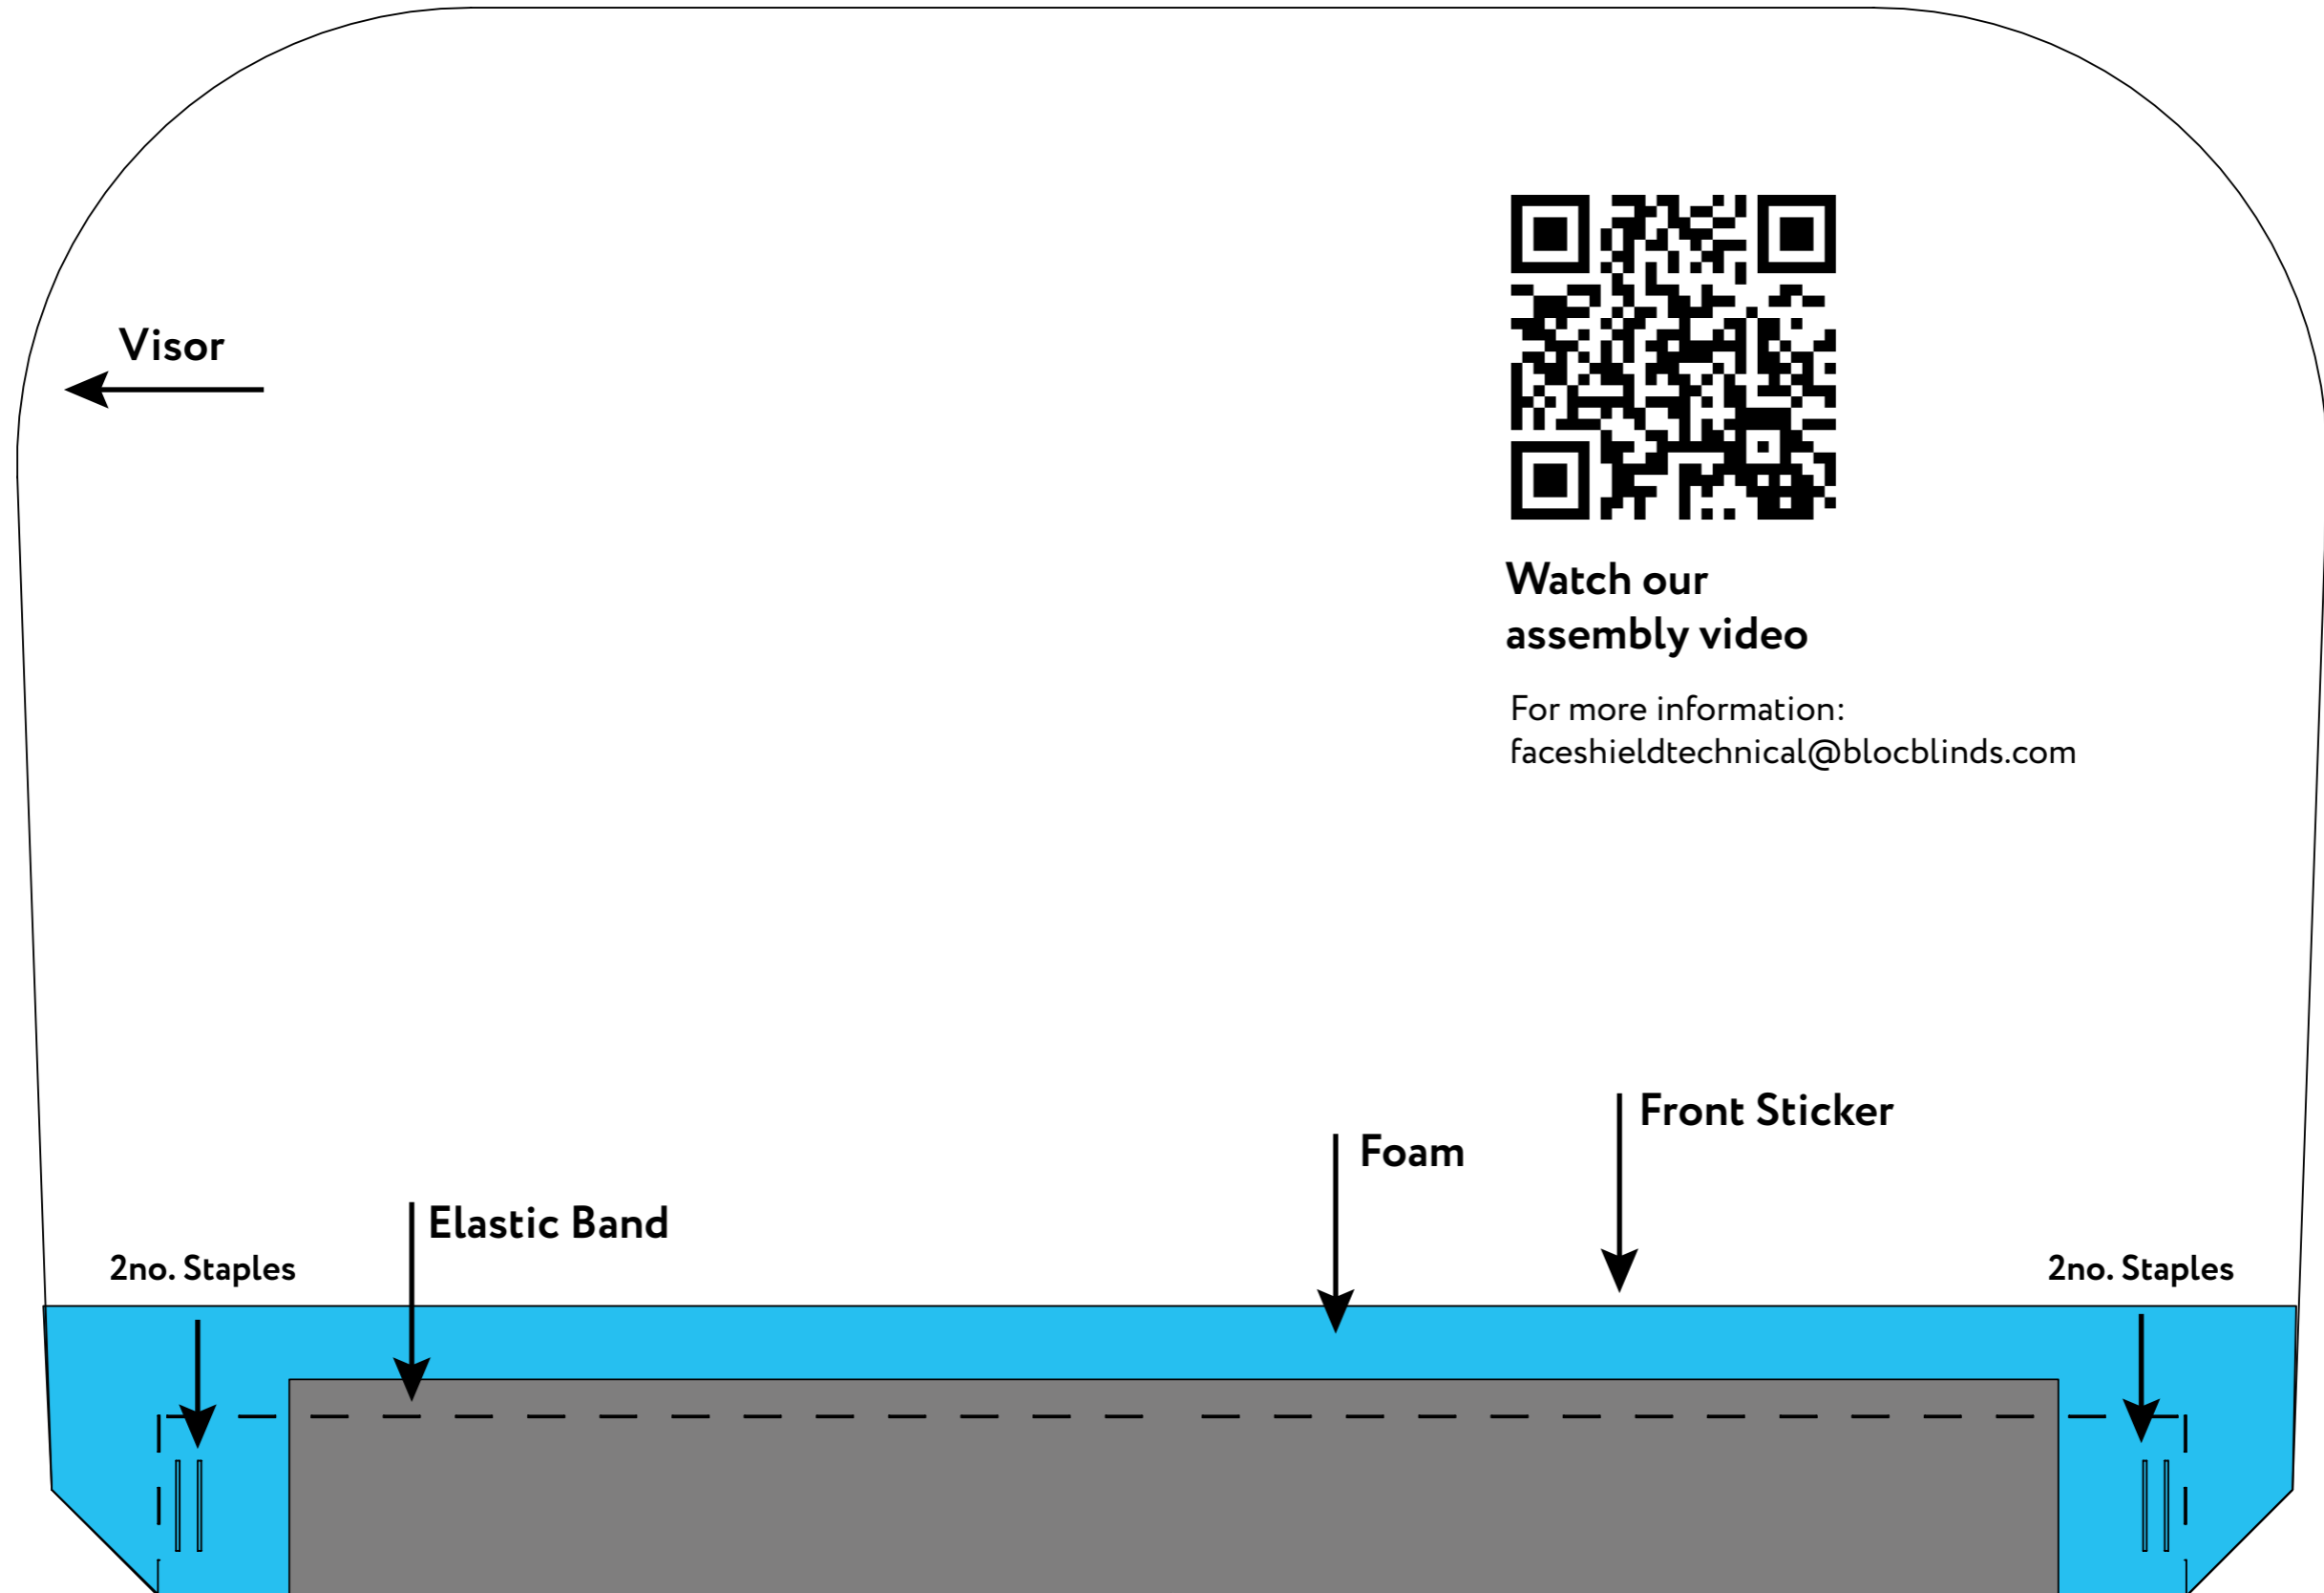

Watch our assembly video

For more information:  
[faceshieldtechnical@blocblinds.com](mailto:faceshieldtechnical@blocblinds.com)